

	The ORANGE LED flashes every second.	The sensor goes into security mode.	<b>1</b> Cut and restore power supply.
	The ORANGE LED flashes 1 x.	The sensor signals an internal fault.	<b>1</b> Cut and restore power supply. <b>2</b> If orange LED flashes again, replace sensor.
	The ORANGE LED flashes 2 x.	Irregularities in the power supply	<b>1</b> Check power supply. <b>2</b> Check wiring.
	The ORANGE LED flashes 4 x.	The sensor receives not enough IR-energy.	<b>1</b> Use the 1 m prism if possible. <b>2</b> Check the angle of the IR-curtains.
	The ORANGE LED flashes 5 x.	The sensor receives too much IR-energy.	<b>1</b> Use a low energy prism if possible. <b>2</b> Check the angle of the IR-curtains.
	The ORANGE LED is on.	The sensor encounters a memory problem.	<b>1</b> Cut and restore power supply. <b>2</b> If orange LED lights up again, replace sensor.
	The RED LED flashes quickly after an assisted setup.	The sensor sees the door during the assisted setup.	<b>1</b> Check the angle of the IR-curtains. <b>2</b> Launch a new assisted setup. <b>Attention: Do not stand in the detection field!</b>
	The RED LED lights up sporadically.	The sensor vibrates.	<b>1</b> Check if the sensor is fastened firmly. <b>2</b> Check position of prism and cover.
		The sensor sees the door.	<b>1</b> Launch an assisted setup and adjust the IR angle.
		The sensor is disturbed by lamps or another sensor.	<b>1</b> Choose a different frequency by remote control.
		The sensor is disturbed by the rain.	<b>1</b> Increase the IR-immunity filter to value 2 or 3. <b>2</b> Select presetting 2 or 3 by push button.
	The GREEN LED lights up sporadically.	The sensor is disturbed by rain and/or leaves.	<b>1</b> Select presetting 2 or 3 by push button. <b>2</b> Increase radar-immunity filter by remote control.
		Ghosting	<b>1</b> Change radar antenna angle.
		The sensor vibrates.	<b>1</b> Check if the sensor is fastened firmly. <b>2</b> Check position of cable and cover.
		The sensor sees the door or other moving objects.	<b>1</b> Remove the objects if possible. <b>2</b> Change radar antenna. <b>3</b> Change radar field size (sensitivity).
	The LED is off.		<b>1</b> Check connections to test output. <b>2</b> If your door controller is not able to test the sensor, connect the red and blue cable to power supply.*
	The reaction of the door does not correspond to the LED-signal.		<b>1</b> Check output configuration setting. <b>2</b> Switch value 1 (A-P) to 4 (A-A) or 4 to 1 by remote control.

\*excludes DIN18650-conformity of the door system



**SAFETY INSTRUCTIONS**

The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety and if applicable, the machinery directive 2006/42/EC.

Only trained and qualified personnel may install and setup the sensor.

The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.

Avoid touching any electronic and optical components.



BEA hereby declares that the ACTIV8 ONE ON is in conformity with the basic requirements and the other relevant provisions of the directives 1999/5/EC, 2004/108/EC and 2006/42/EC.

Notified Body for EC inspection: 0044 - TÜV NORD CERT GmbH, Langemarckstr. 20, D-45141 Essen

Angleur, November 2010 Jean-Pierre Valkenberg, Authorized representative

The complete declaration of conformity is available on our website: [www.bea.be](http://www.bea.be)



Only for EC countries: According to the European Guideline 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE)



Please keep for further use  
Designed for colour printing




Other use of the device is outside the permitted purpose and can not be guaranteed by the manufacturer. The manufacturer cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.

# ACTIV8 ONE ON

## Opening & safety sensor for automatic sliding doors

### DESCRIPTION

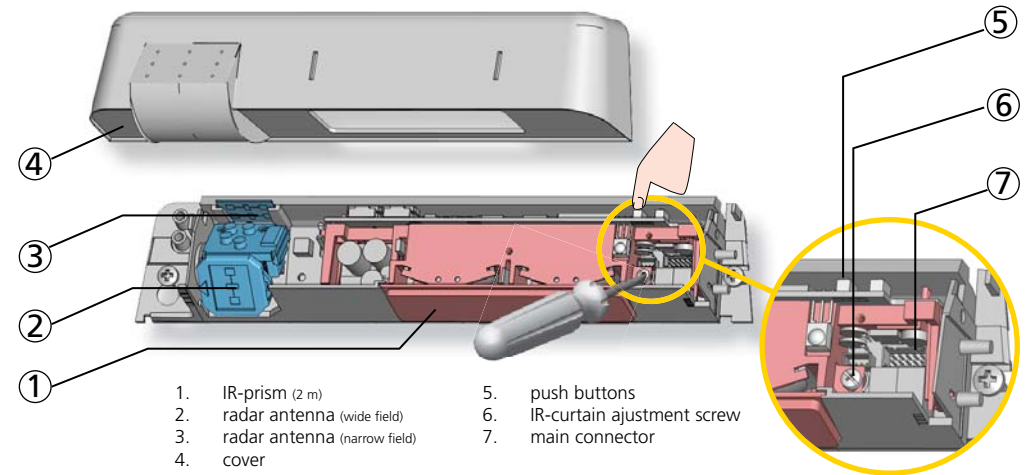


### TECHNICAL SPECIFICATIONS

Supply voltage:	12 V - 24 V AC +/-10% ; 12 V - 30 V DC -5%/+10% (to be operated from SELV compatible power supplies only)	
Power consumption:	< 3 W	
Mounting height:	1.8 m to 4 m (< 3 m to enable DIN 18650-conformity)	
Sensitivity of the test input:	< 1 V : Log. L; > 10 V: Log. H (max. 30 V)	
Temperature range:	-25 °C to +55 °C	
Degree of protection:	IP54	
Expected lifetime:	5 years	
Norm conformity:	R&TTE 1999/5/EC; EMC 2004/108/EC; MD 2006/42/EC; EN 12978 EN ISO 13849-1:2008 Performance Level «c» CAT. 2 (under the condition that the door control system monitors the sensor at least once per door cycle)	
Detection mode:	Motion Min. detection speed: 5 cm/s	Presence Typical response time: <128 ms (max. 500 ms)
Technology:	Microwave doppler radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm2	Active infrared with background analysis Spot diameter: 0.1 m (typ) Number of spots: 24 or 12 by curtain Number of curtains: 2
Angle:	From 15 ° to 50 ° vertical (adjustable)	From -4 ° to +4 ° (adjustable)
Output:	Relay (free of potential) Max. contact voltage: 42 V AC/DC Max. contact current: 1 A (resistive) Max. switching power: 30 W (DC)/60 VA (AC)	Solid-state-relay (free of potential, free of polarity) Max. contact current: 100 mA Max. contact voltage: 42 V AC/DC
Hold time output signal:	0.5 s to 9 s (adjustable)	0.3 s to 1 s (not adjustable)
Response time on test request:	Typical: < 15 ms (max. 25 ms)	


Specifications are subject to changes without prior notice.  
All values measured in optimal conditions.

# 1 MOUNTING & WIRING


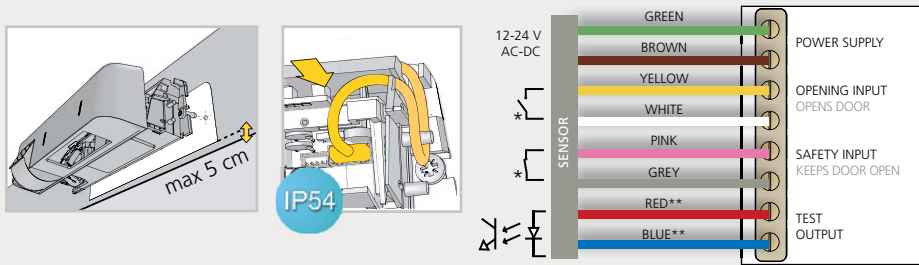


The door control unit and the door cover profile must be correctly earthed.

# 2 RADAR FIELD - OPENING IMPULSE




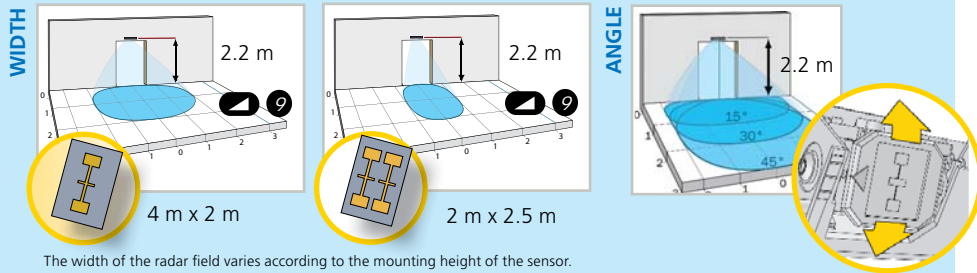


# 3 INFRARED FIELD - SAFETY

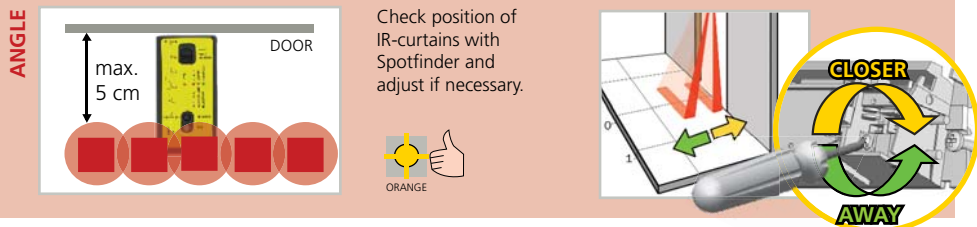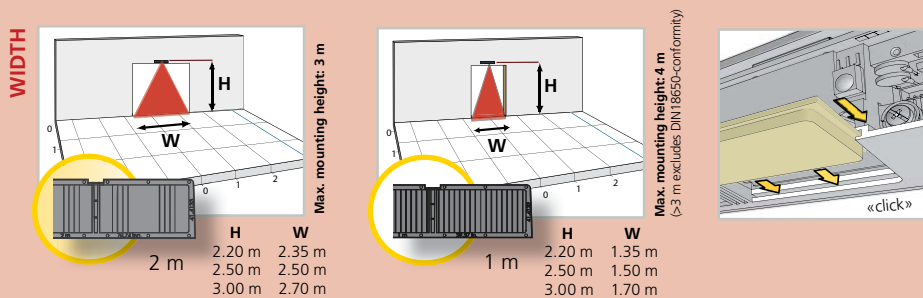

**TIP:** Launch an **ASSISTED SETUP** to verify wiring, position of the curtains and correct functioning of the sensor. It is recommended to clean the optical parts at least once a year or more often if required due to environmental conditions.


# 4 SETTINGS (by push buttons and/or remote control)

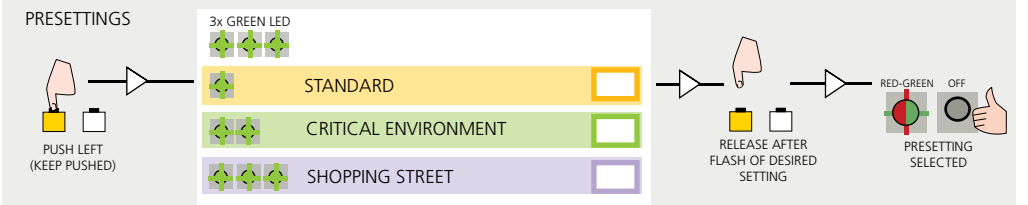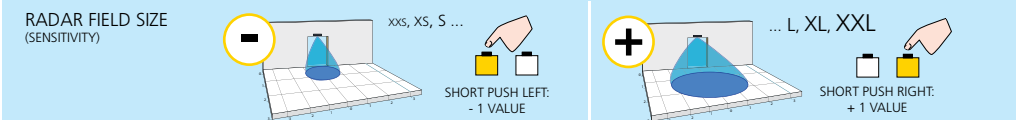

FIELD SIZE (SENSITIVITY)	XXS XS S > > > > L XL XXL	L = 3.20 m x 1.40 m (at 2.2 m)
IMMUNITY FILTER	low normal high > > > >	
DETECTION MODE	bi uni uni PRM uni AWAY	bi = two-way detection; uni = one-way detection towards sensor; uni PRM = for persons with reduced mobility; uni AWAY = away from sensor
HOLD TIME	0.5 s 1 s 2 s 3 s 4 s 5 s 6 s 7 s 8 s 9 s	
OUTPUT SIGNAL		
TEST (MONITORING)	off on auto	auto = the sensor will automatically adapt to the door controller: when the door controller monitors the sensor > on when the door controller does not monitor the sensor > off (excludes DIN18650-conformity)
OUTPUT CONFIGURATION	A-P P-A P-P A-A	A = active output (NO-contact) Opening Safety P = passive output (NC-contact)
OUTPUT REDIRECTION	F1 motion motion or presence motion and presence	opening output is active in case of: 0 motion detection 1 motion or presence detection 2 motion and presence detection
NUMBER OF CURTAINS	service mode 1 2 dynamic mode	service mode = no detection is active during 15 minutes (maintenance). dynamic mode = 2 <sup>nd</sup> curtain is only active during motion detection.
IMMUNITY FILTER*	normal medium high > > > >	immunity 3 is only suitable if a combined sensor is on each side of the door
PULSE FREQUENCY	freq A freq B freq A+ freq B+	
MAX. PRESENCE TIME	30 s 1 min 2 min 5 min 10 min 20 min 60 min	

FACTORY VALUES excludes DIN18650-conformity of the door system

# 5 SETUP (step out of the detection field during setup)

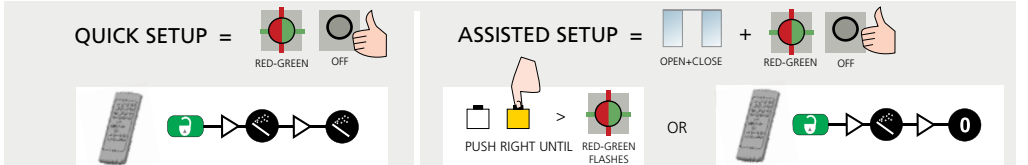

**IMPORTANT:** Test the good functioning of the installation before leaving the premises.

\* In immunity 2 and 3, the standard detection capability is the same as in immunity 1 (factory setting). Environmental and installation conditions can affect the detection capability of the sensor or can impact the availability of the door system. During harsh conditions, the sensor can temporarily adapt the detection capability to ensure the availability of the door system.